


Quick guide to assembling Silclear Silicone Liners & Shells

Putting new or cleaned liners into Shells

When fitting your replacement Silclear liners into the clear shells, we recommend that you use the following procedure:

1. You will need a pair of long-nosed pliers to help make the job of changing your new liners into your existing shells very easy.
2. Wrap tell-tail tape, or similar, around each jaw of the pliers to stop them damaging the ends of the new liners. Please note the plier jaws can be very sharp and may cut into the silicone material if this precaution is not taken.
3. Insert the liner into the top end of the shell, and then the pliers into the bottom end of the shell.
4. Push the liner onto one jaw of the pliers, in such a way that you can firmly grip the liner between the two jaws of the pliers (picture 1).
5. Pull the liner through the bottom hole of the shell using one strong pull (picture 2).
6. Fit the notch of the liner into the bottom of the shell.
7. Fit the head over the top end of the shell, taking care to ensure that the liner is straight.
8. Attach to thoroughly degreased liner spigot on your milking claw.

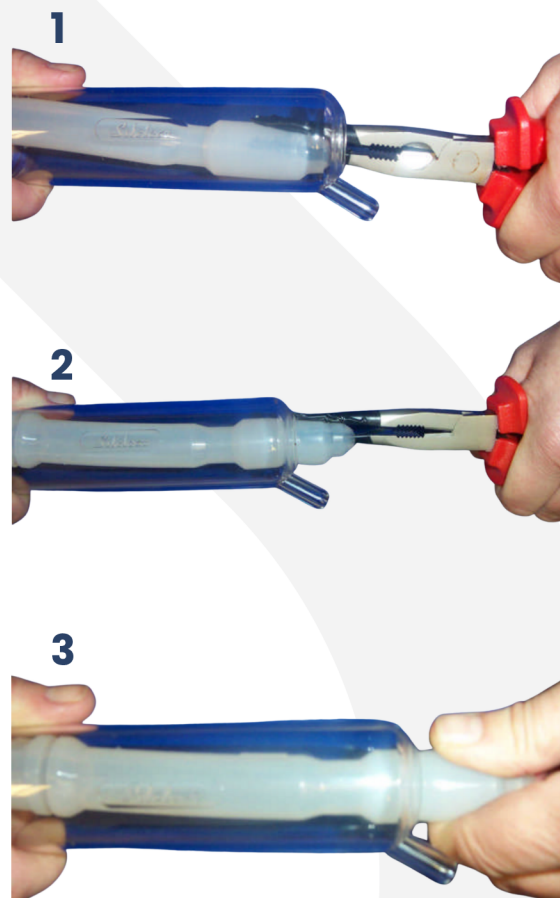

Removing Liners from Shells

1. Detach head of liner from top of shell.
2. Push notch through bottom of shell
3. Push thickened bottom end of liner through shell (see picture 3)
4. Pull out.